


LAPPSET®

PARKOUR






ASENNUSOHJE
MONTERINGSANSVISNING
INSTALLATION INSTRUCTION
AUFBAUANLEITUNG
NOTICE D'INSTALLATION


DATE: 7.2.2013





220561

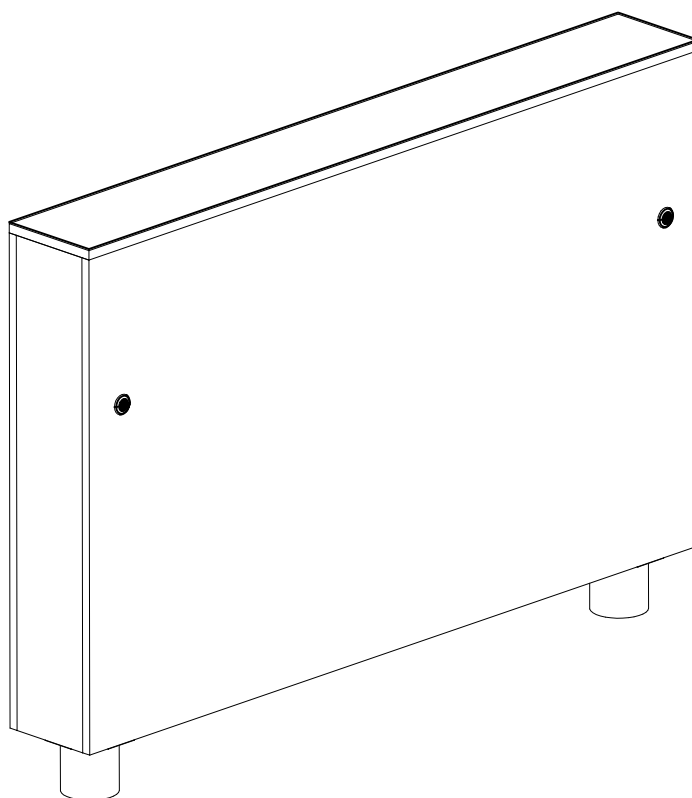

DATE: 7.2.2013

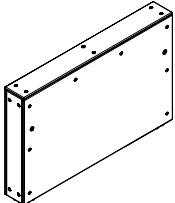702341  90x50	PCS 1	703930  170x1300x810	PCS 1	903112  750	PCS 2	905067  S35H	PCS 4	905104  M10	PCS 16	909858  M20	PCS 4
909859  Ø37/21	PCS 4	909860  M20x500	PCS 2	909639  M10x12	PCS 4	909637  M10	PCS 4		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS

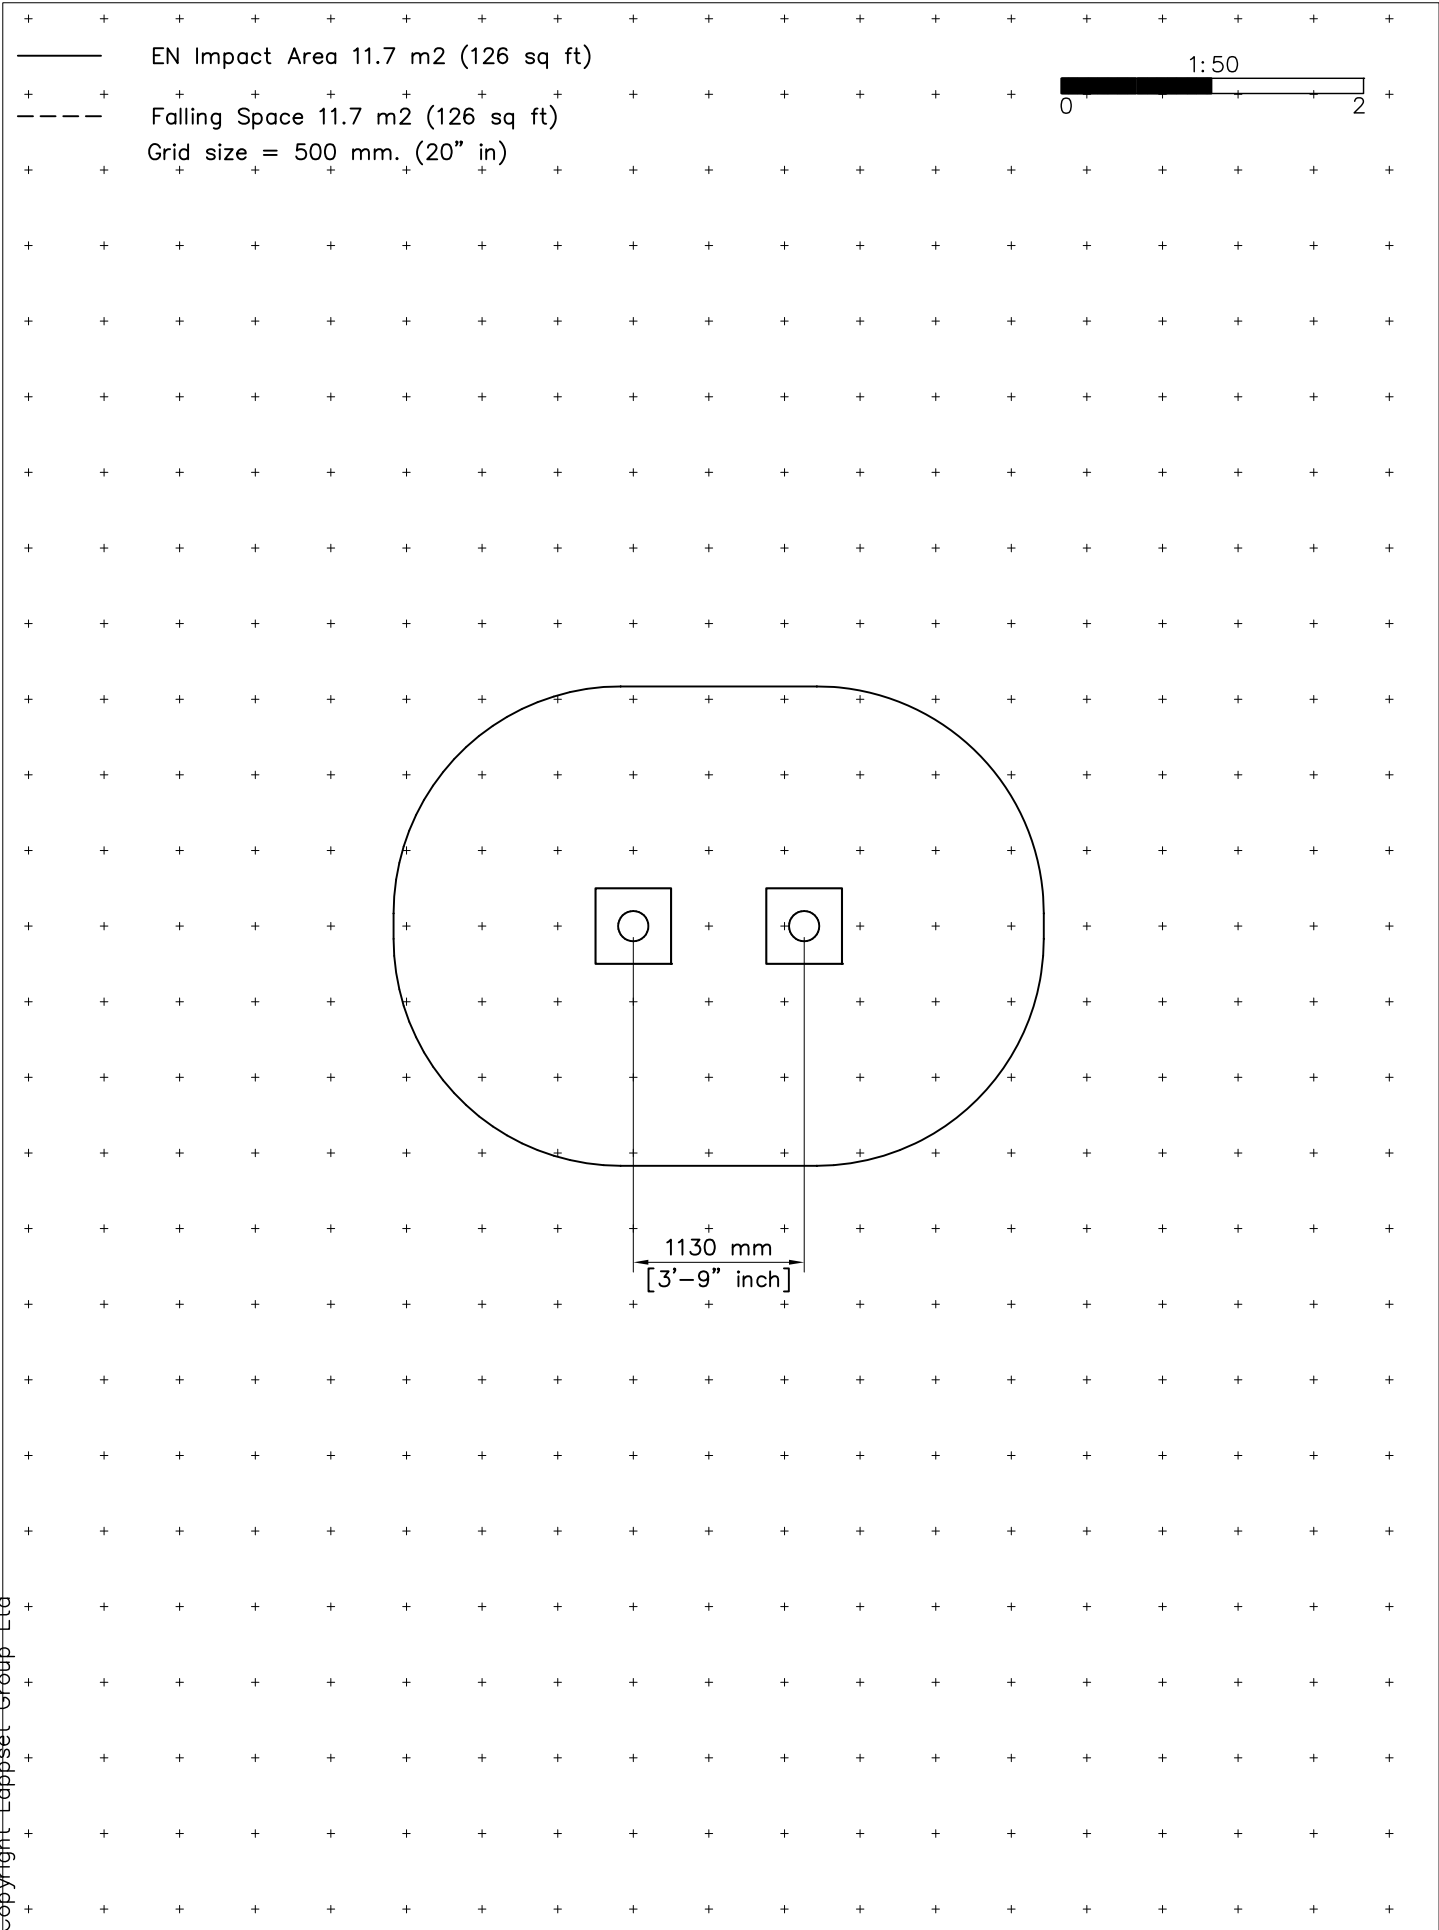

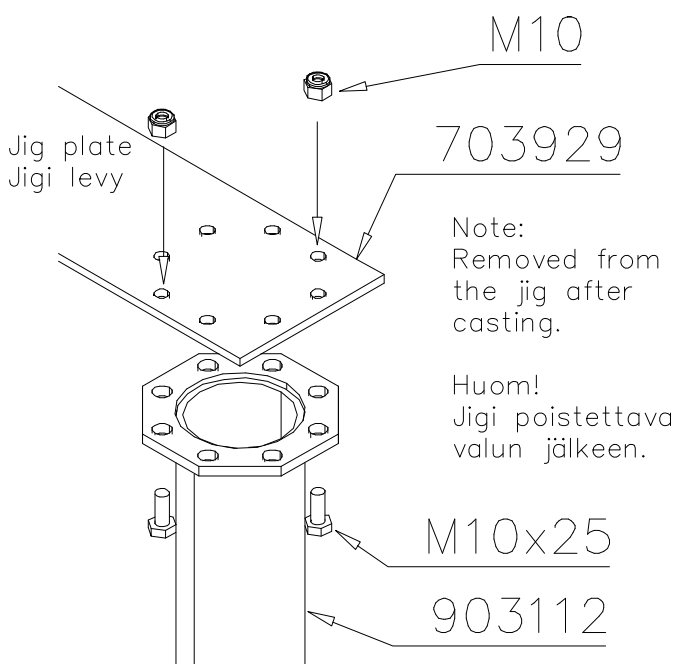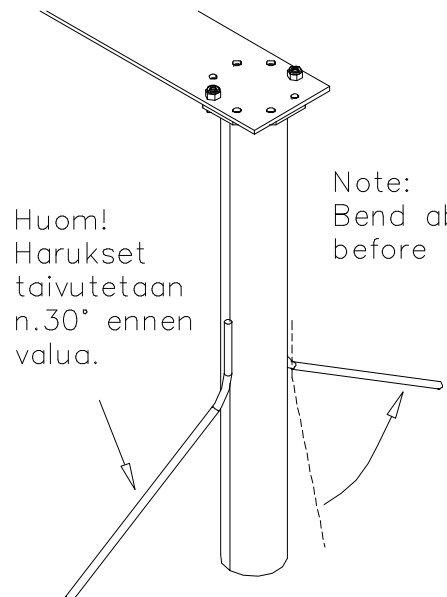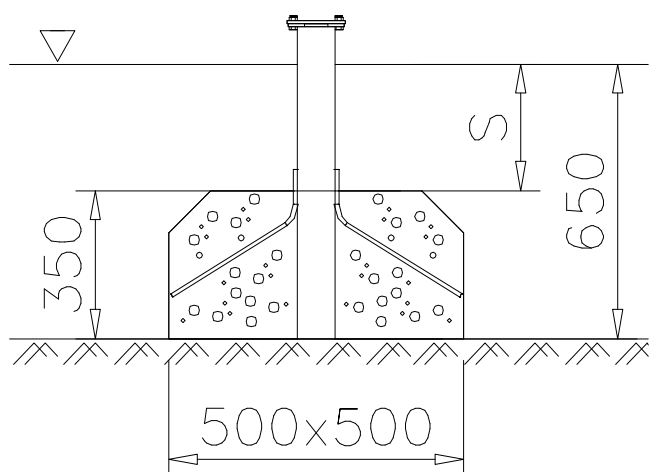
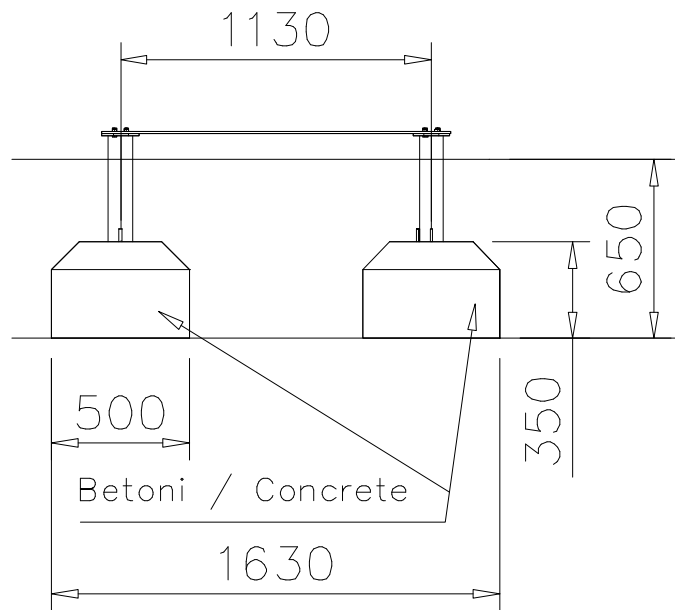
 M10 703929 Jig plate Jigi levy Note: Removed from the jig after casting. Huom! Jigi poistettava valun jälkeen. M10x25 903112	 Note: Bend about 30° before casting. Huom! Harukset taivutetaan n.30° ennen valua.	
 350 650 500x500	 1130 650 500 Betoni / Concrete 1630 350	



Copyright Lappset Group Ltd



EN Impact Area 11.7 m² (126 sq ft)

Falling Space 11.7 m² (126 sq ft)

Max Falling Height 910 mm (3' ft)

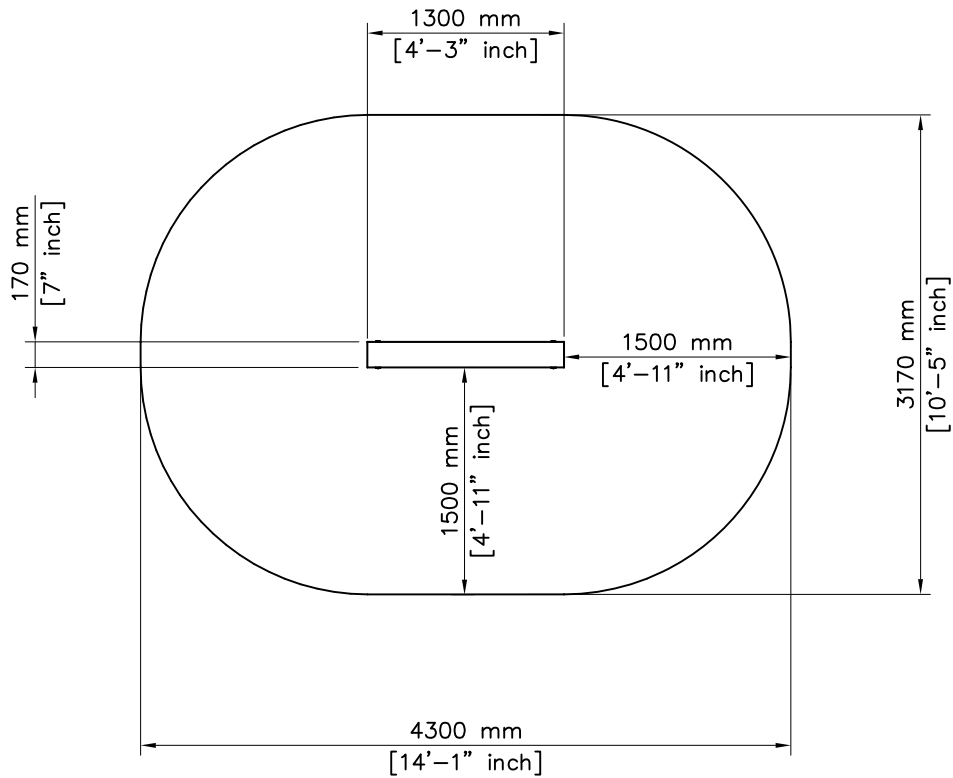

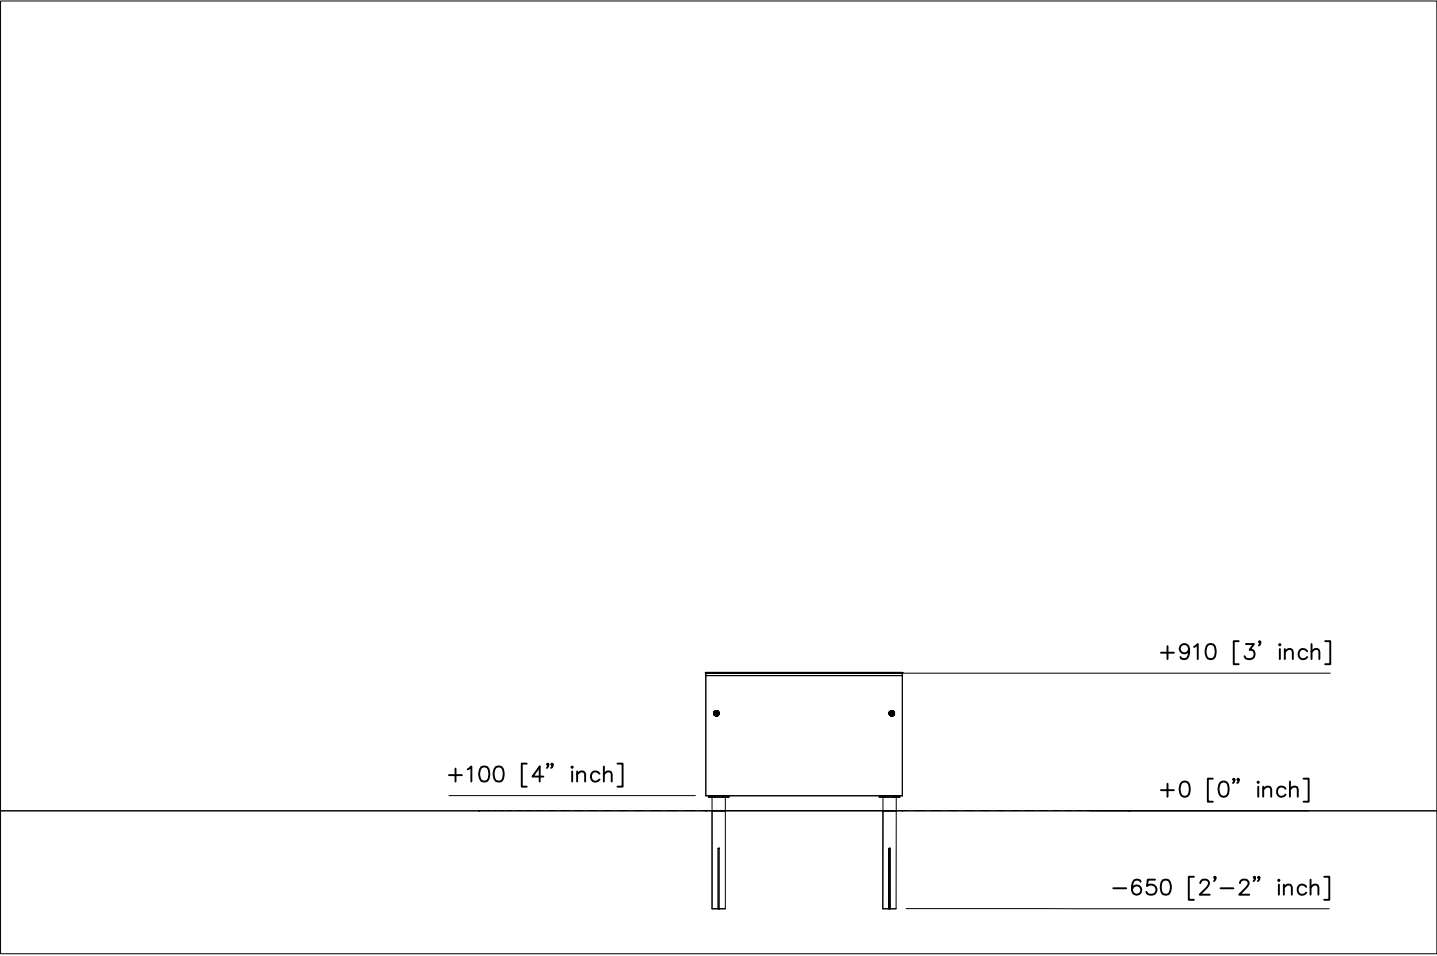


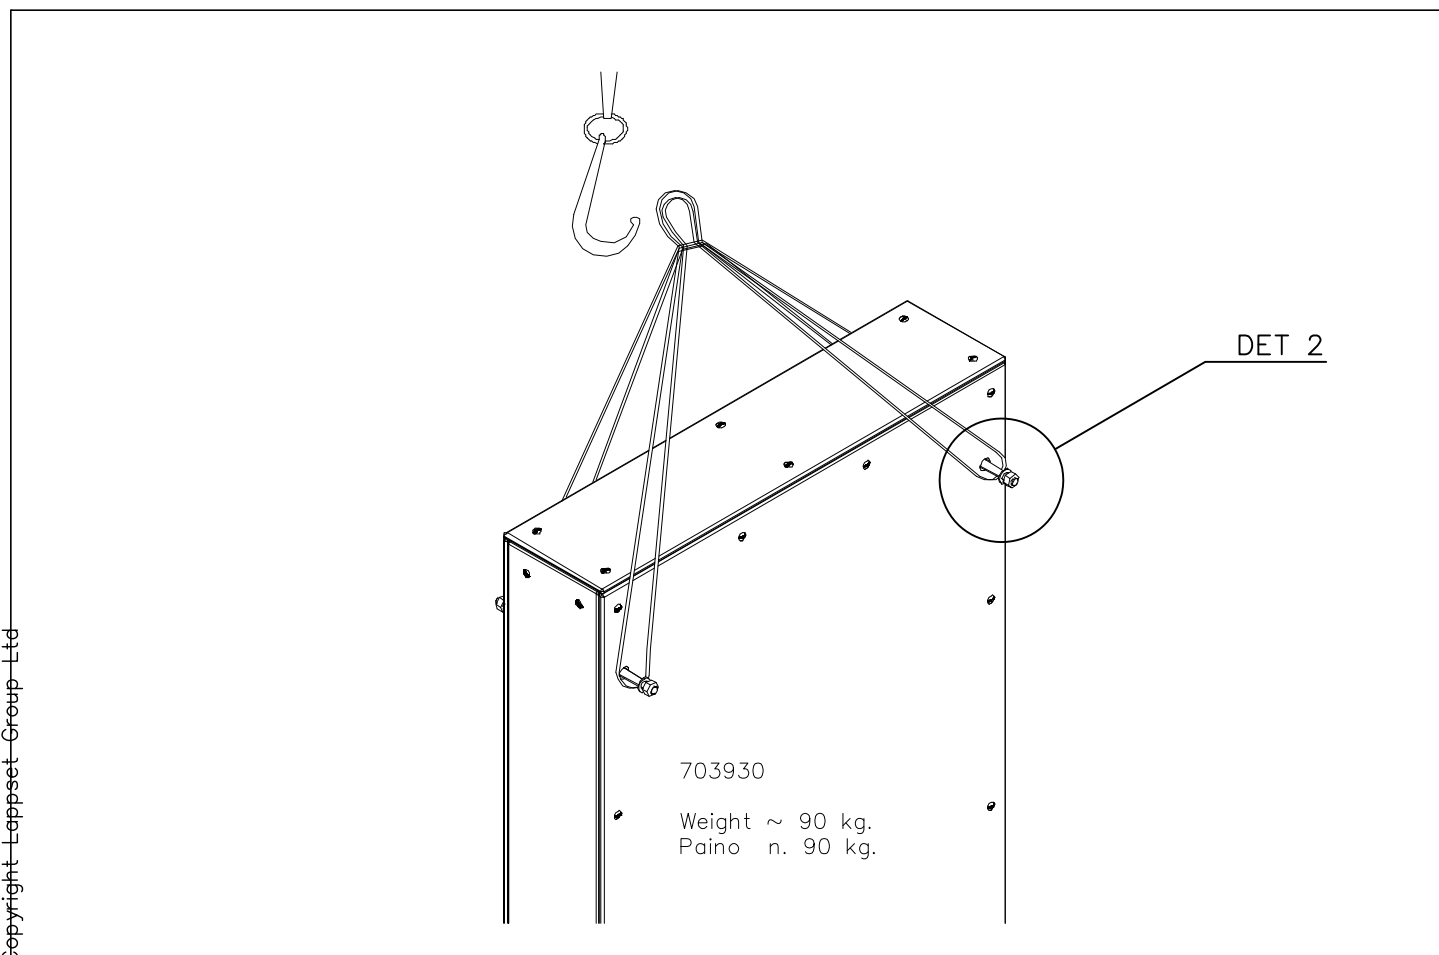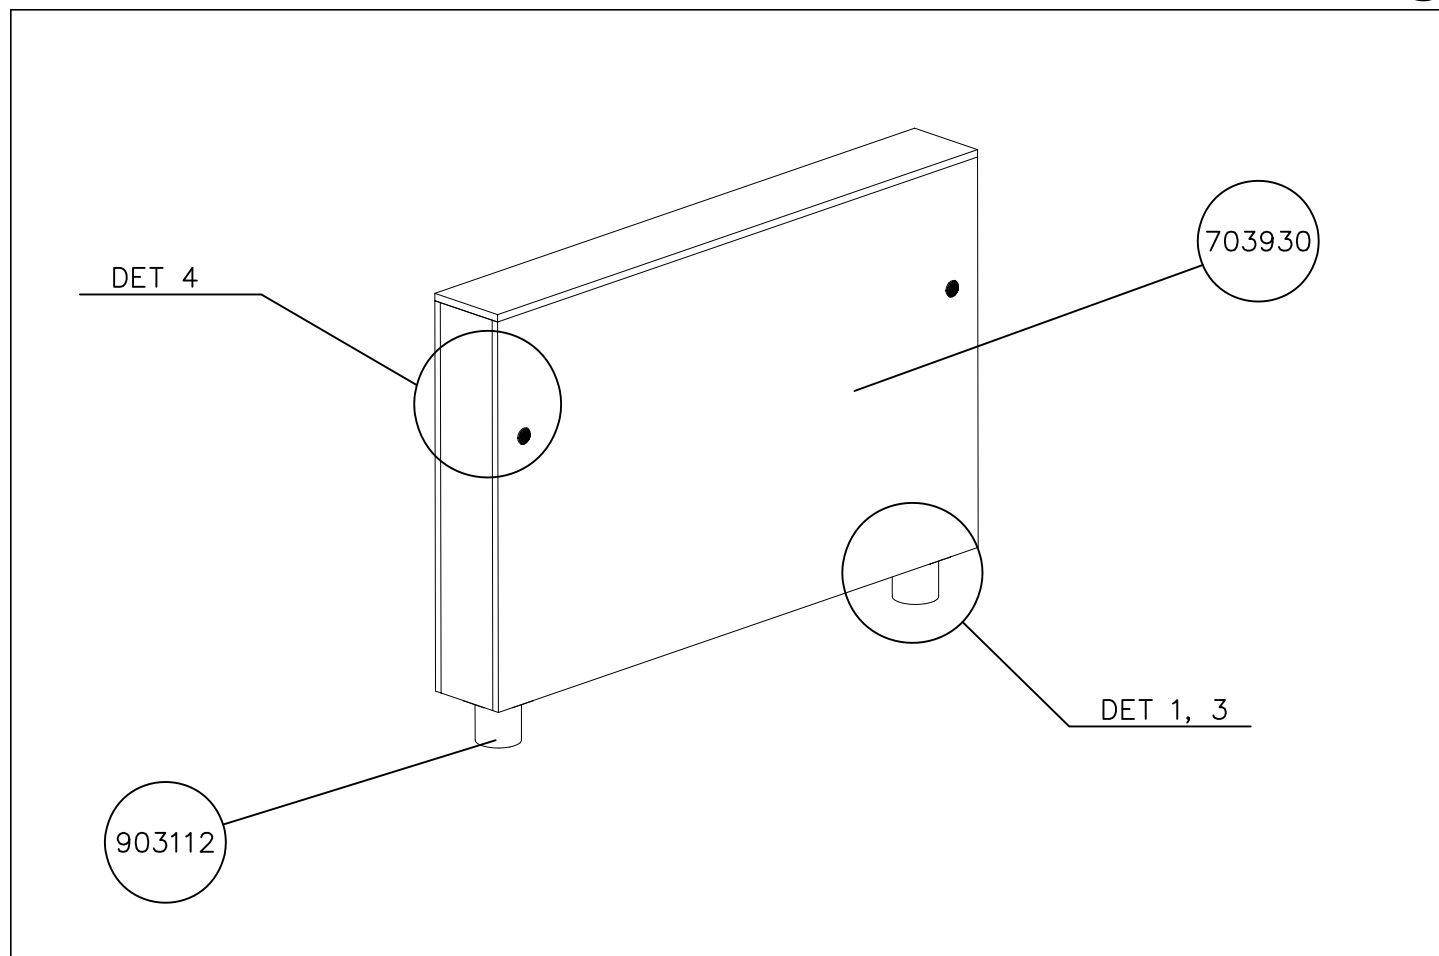

DET 1

Note:
Installation jig plate.


Huom!
Asennus jig levy.

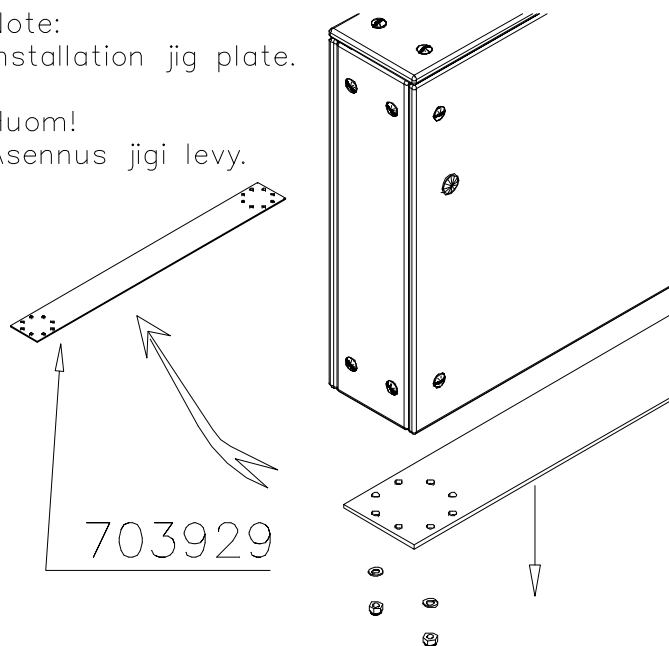


DET 2

Note:
Before lifting.

Huom!
Ennen nostoa.

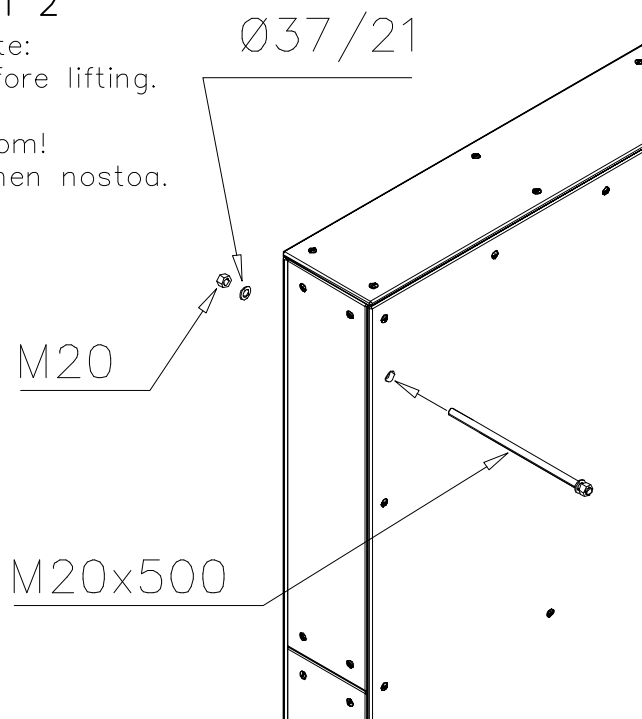

DET 3

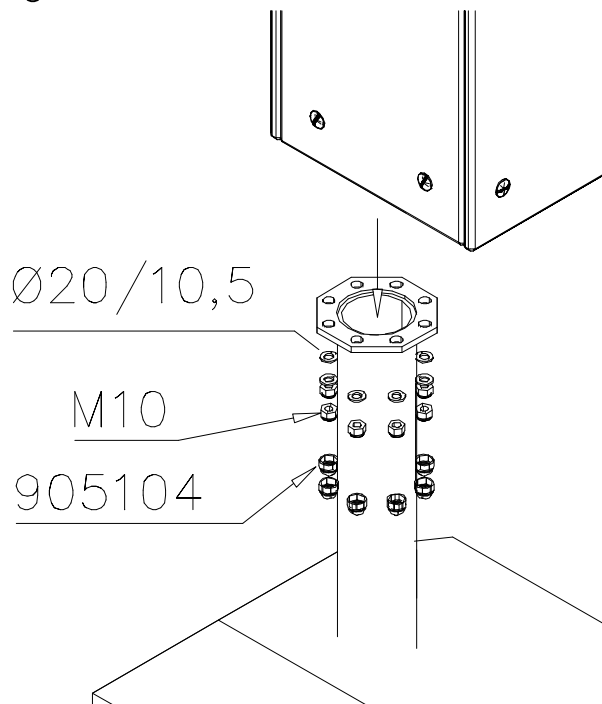

DET 4

