


LAPPSET®

PARKOUR









ASENNUSOHJE
MONTERINGSANVISNING
INSTALLATION INSTRUCTION
AUFBAUANLEITUNG
NOTICE D'INSTALLATION

DATE: 7.2.2013

220560

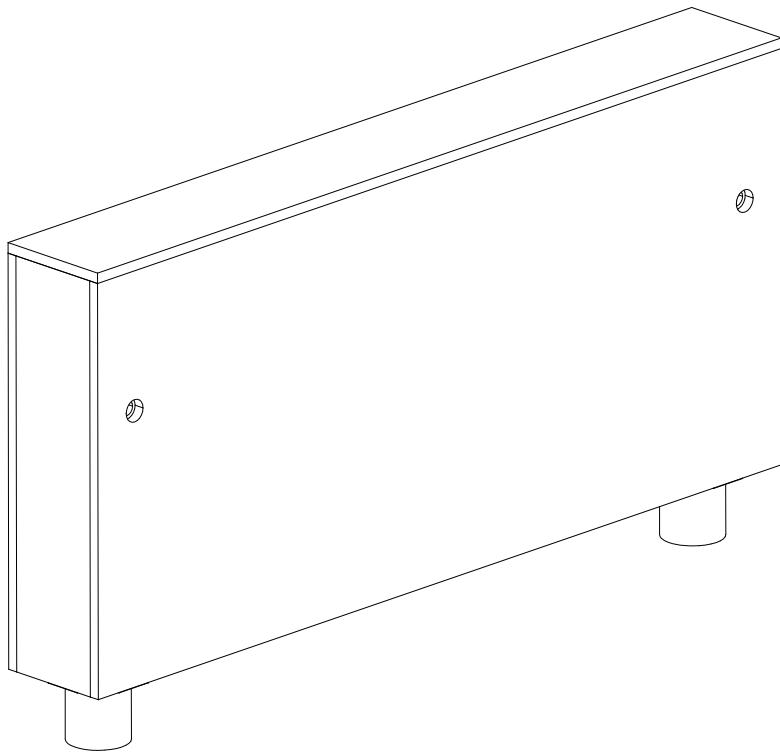

DATE: 7.2.2013

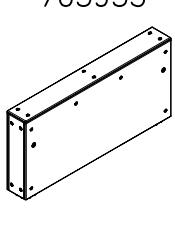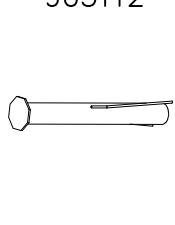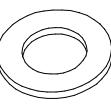702341  90x50	PCS 1	703935  170x1300x610	PCS 1	903112  750	PCS 2	905067  S35H	PCS 4	905104  M10	PCS 16	909858  M20	PCS 4
909859  Ø37/21	PCS 4	909860  M20x500	PCS 2	909639  M10x25	PCS 4	909637  M10	PCS 4		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS

DATE: 7.2.2013

4


EN Impact Area 11.7 m² (126 sq ft)



Falling Space 11.7 m² (126 sq ft)

Grid size = 500 mm. (20" in)

1:50

0 2

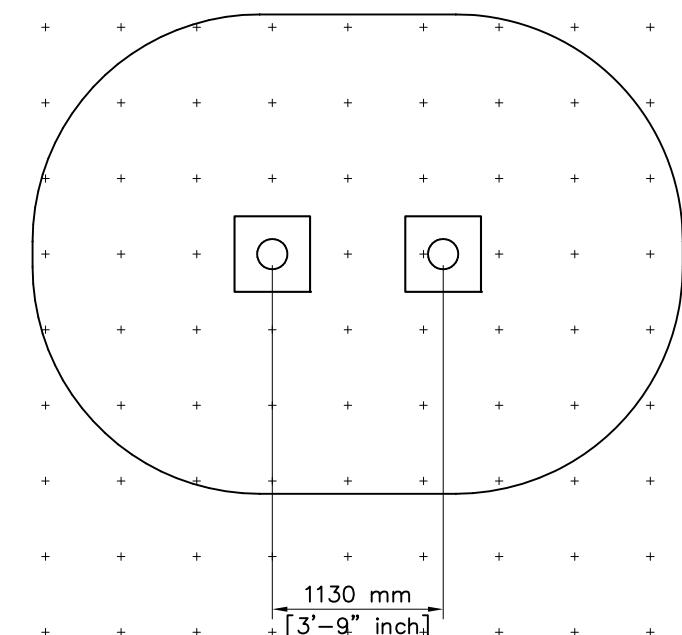

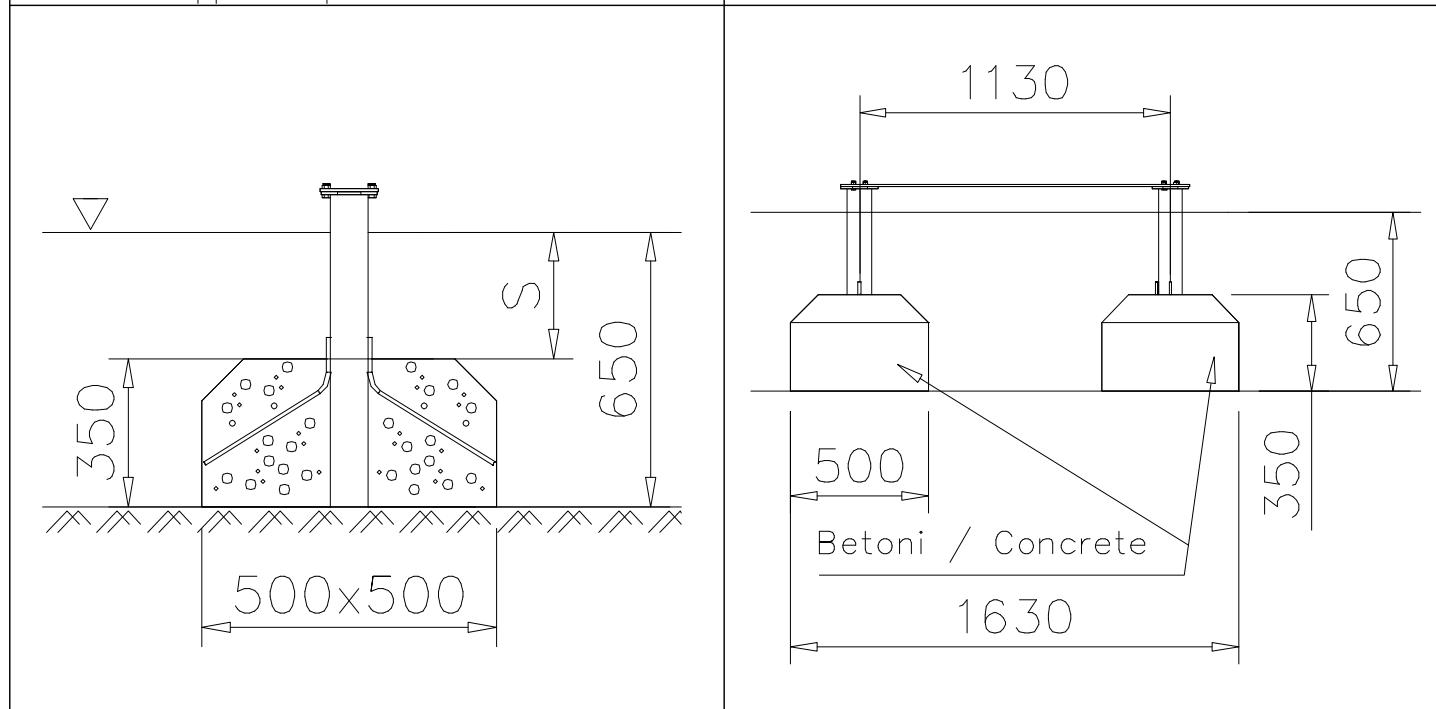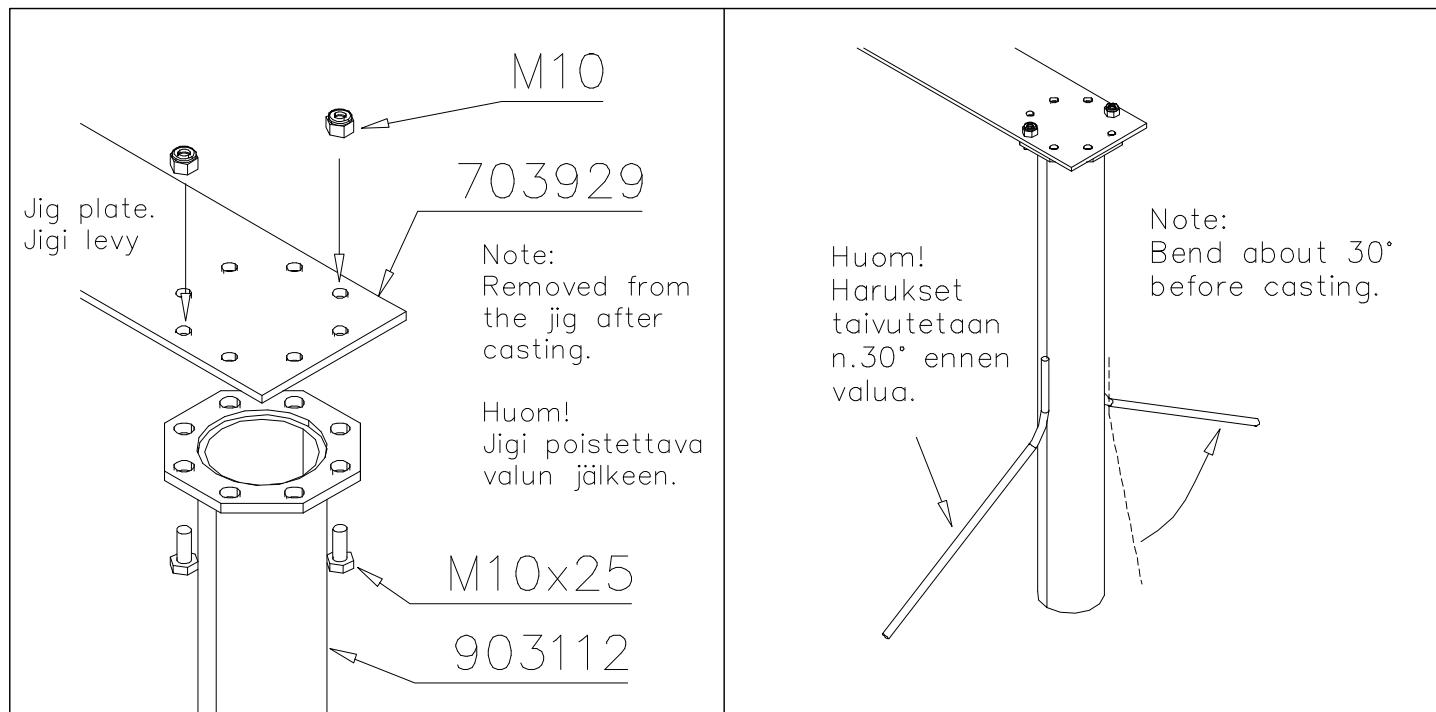

EN Impact Area 11.7 m² (126 sq ft)

1:50


Falling Space 11.7 m² (126 sq ft)


0



1:50

2

Max Falling Height 710 mm (2'-4" in)

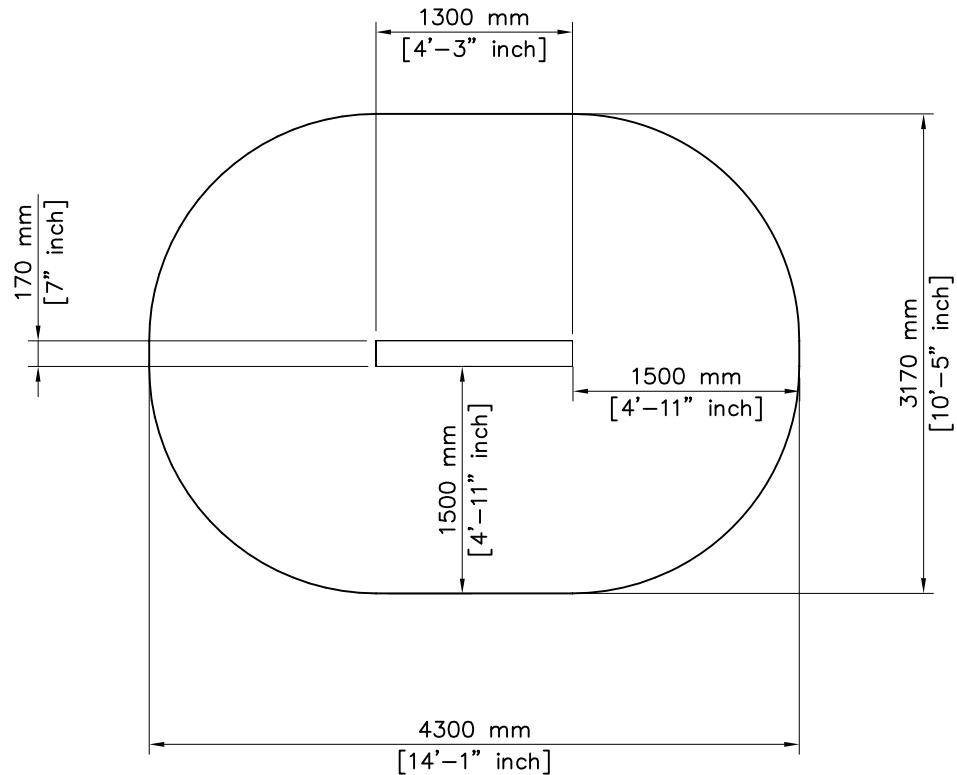

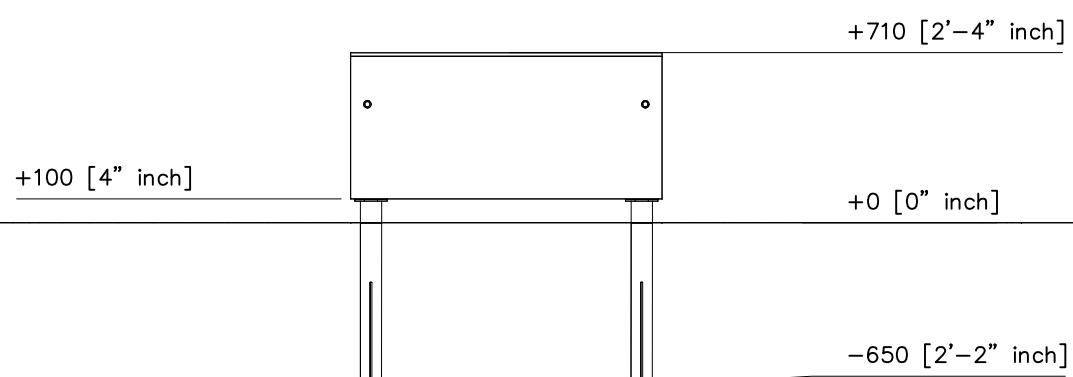


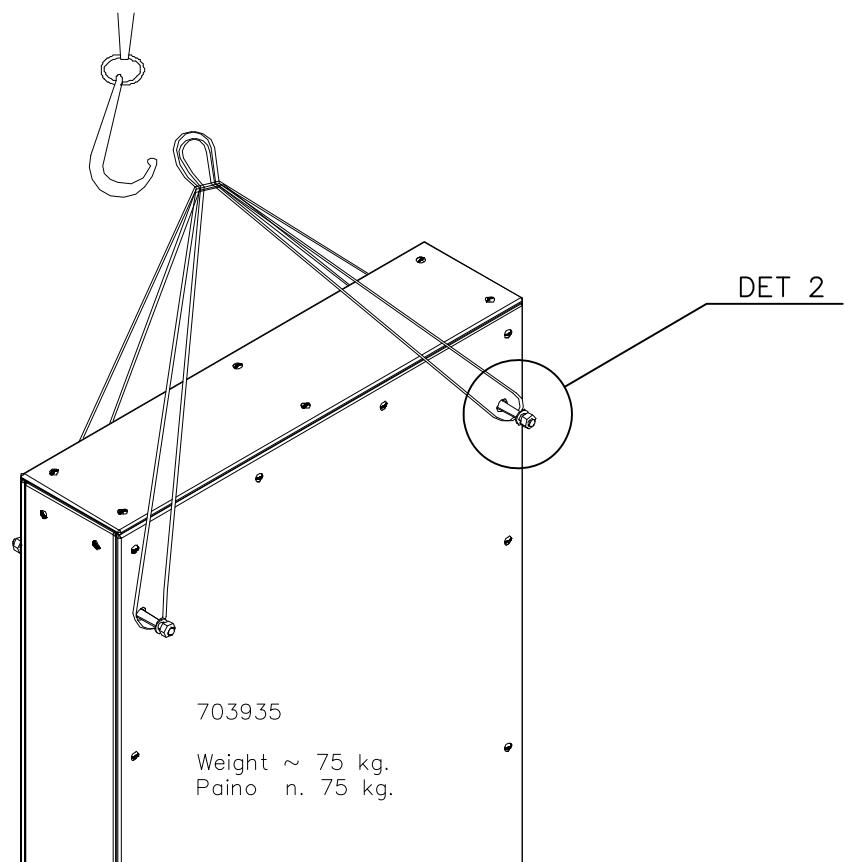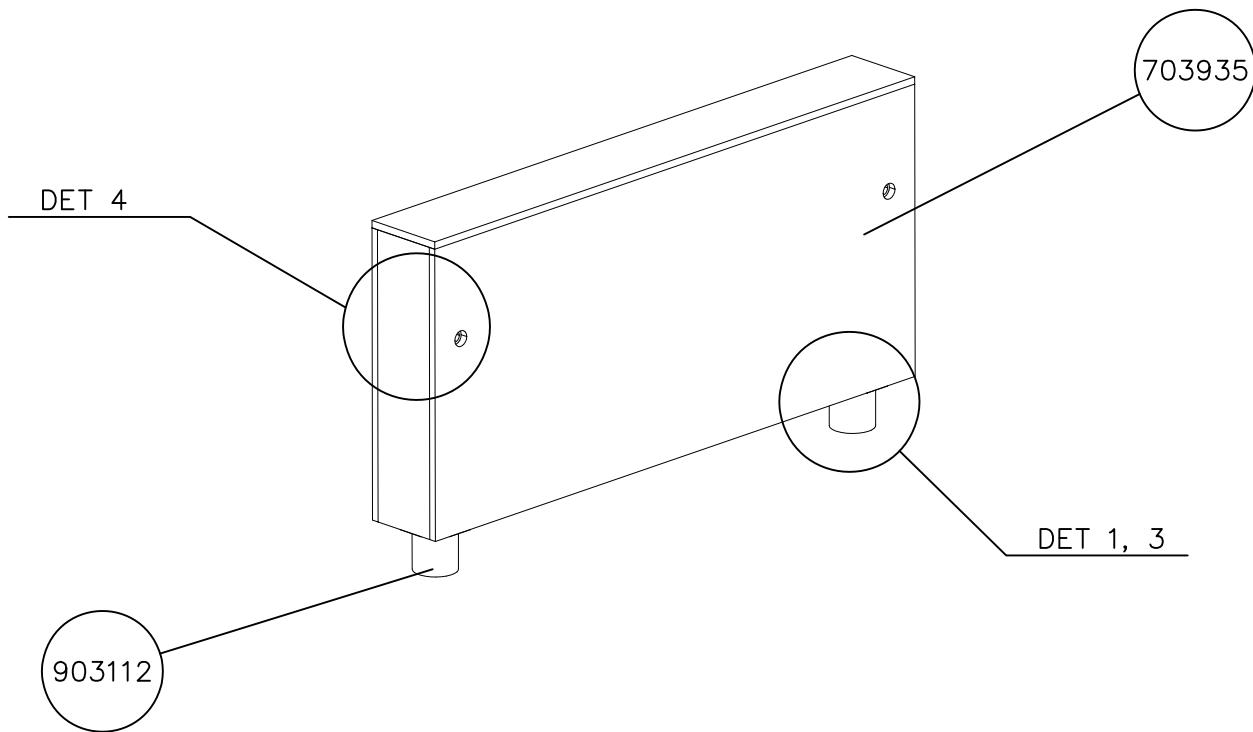

DET 1

Note:
Installation jig plate.


Huom!
Asennus jigi levy.

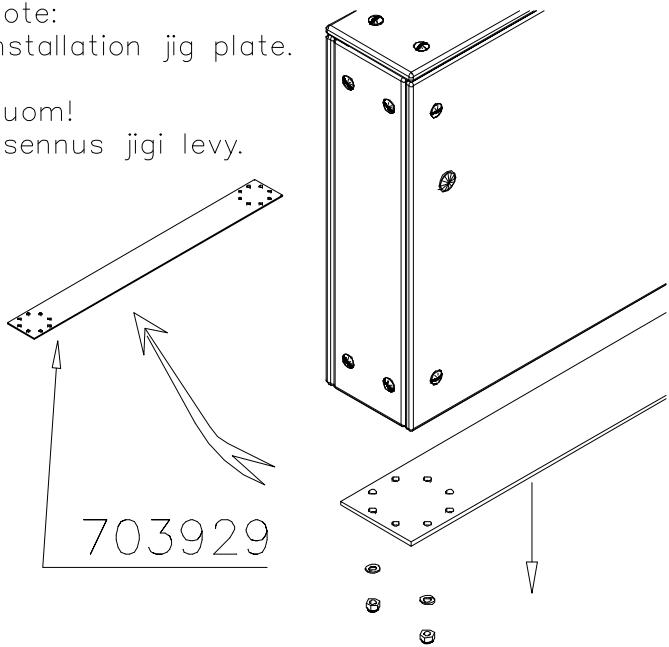


DET 2

Note:
Before lifting.

Huom!
Ennen nostoa.

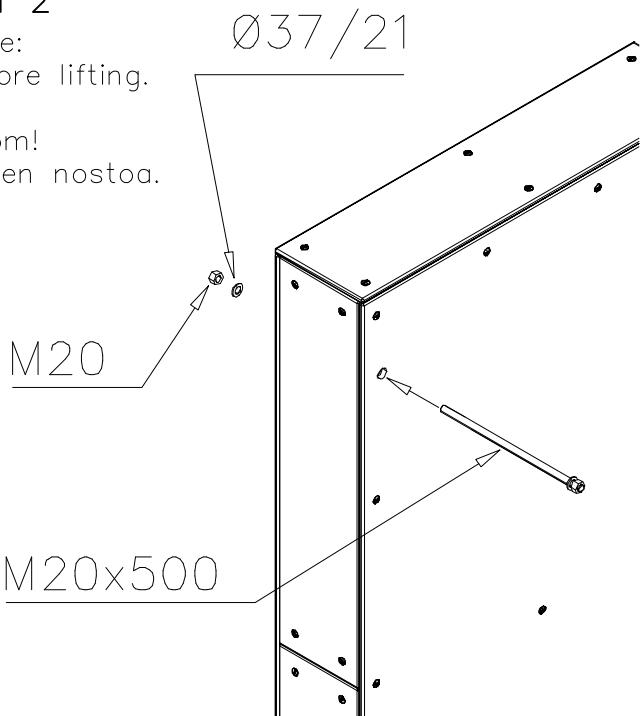

DET 3

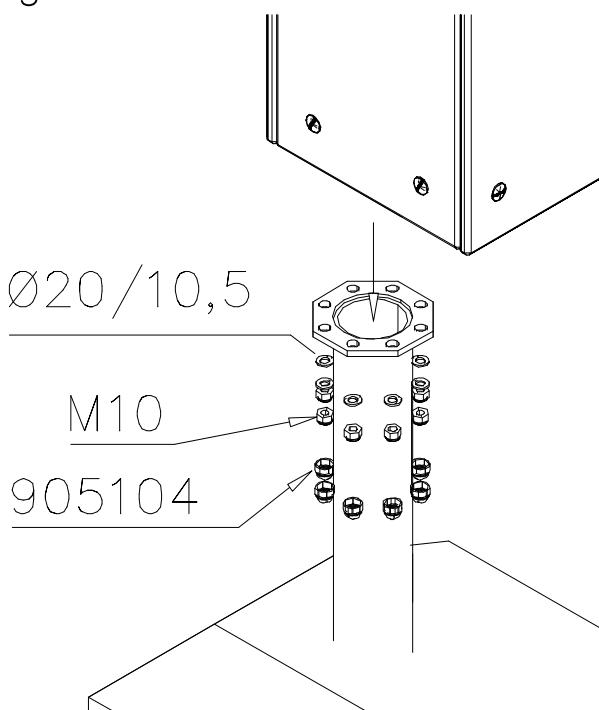

DET 4

