


# **LAPPSET®**

## **PARKOUR**

ASENNUSOHJE  
MONTERINGSANVISNING  
INSTALLATION INSTRUCTION  
AUFBAUANLEITUNG  
NOTICE D'INSTALLATION

DATE: 19.3.2013

**220517**

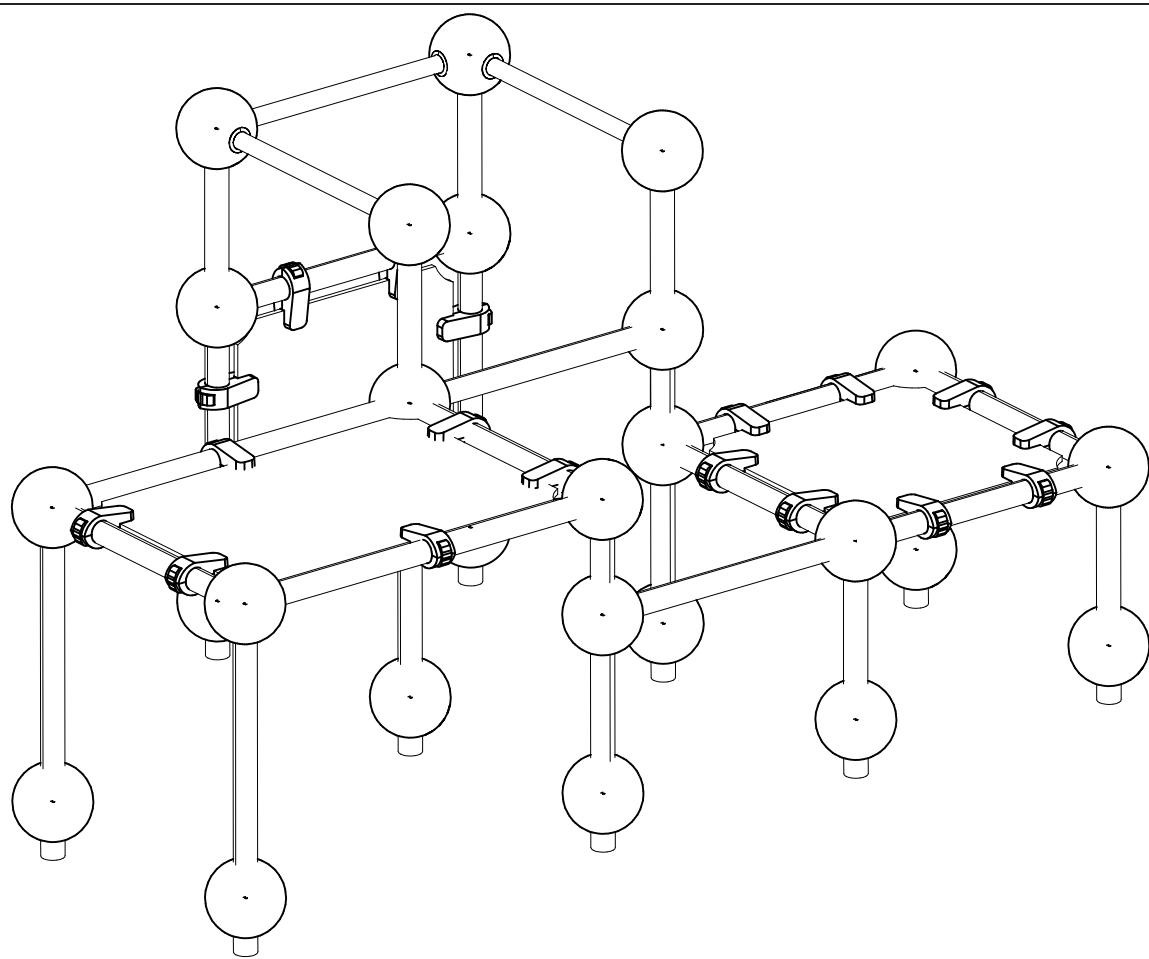

**DATE:** 19.3.2013

**1(1)  
3**

701985 	PCS 10	702056 	PCS 2	702341  90x50	PCS 1	703486 	PCS 1	901991 	PCS 1	902022 	PCS 13
902134 	PCS 26	902157 	PCS 84	902424 	PCS 2	904100 	PCS 6	904132 	PCS 7	904135 	PCS 2
60x60x2 		L 1034 				44.5-60.3 		L 402 		L 710 	
904819 	PCS 3		PCS		PCS		PCS		PCS		PCS
Ø44x710 	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS

