


LAPPSET®

PARKOUR

ASENNUSOHJE
MONTERINGSANVISNING
INSTALLATION INSTRUCTION
AUFBAUANLEITUNG
NOTICE D'INSTALLATION









DATE: 7.2.2012


220565




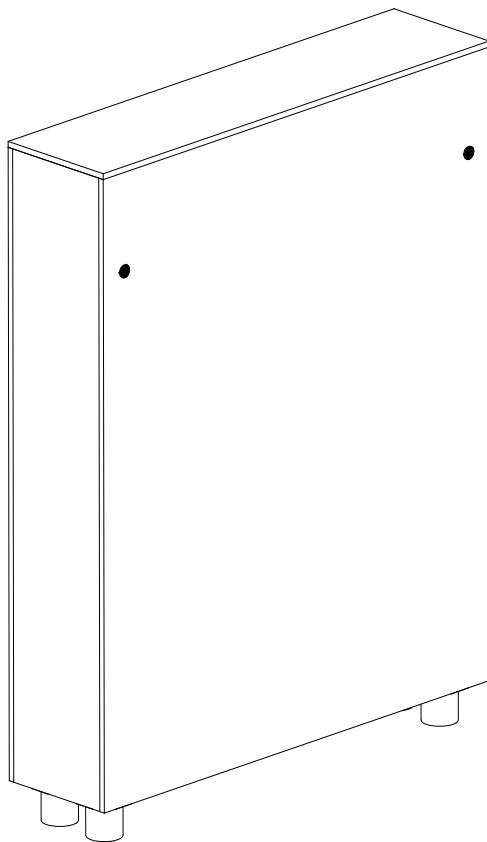


DATE: 7.2.2012

**1(1)
3**
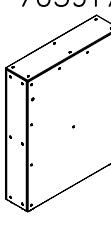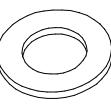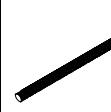
| | | | | | | | | | | | |
|---|----------|--|----------|---|----------|---|----------|--|-----------|--|----------|
| 702341  90x50 | PCS 1 | 703917  320x1300x1620 | PCS 1 | 903112  750 | PCS 4 | 905067  S35H | PCS 4 | 905104  M10 | PCS 32 | 909858  M20 | PCS 4 |
| 909859  Ø37/21 | PCS 4 | 909860  M20x500 | PCS 2 | 909639  M10x12 | PCS 8 | 909637  M10 | PCS 8 | | PCS | | PCS |
| | PCS | | PCS | | PCS | | PCS | | PCS | | PCS |
| | PCS | | PCS | | PCS | | PCS | | PCS | | PCS |
| | PCS | | PCS | | PCS | | PCS | | PCS | | PCS |
| | PCS | | PCS | | PCS | | PCS | | PCS | | PCS |
| | PCS | | PCS | | PCS | | PCS | | PCS | | PCS |
| | PCS | | PCS | | PCS | | PCS | | PCS | | PCS |
| | PCS | | PCS | | PCS | | PCS | | PCS | | PCS |
| | PCS | | PCS | | PCS | | PCS | | PCS | | PCS |
| | PCS | | PCS | | PCS | | PCS | | PCS | | PCS |

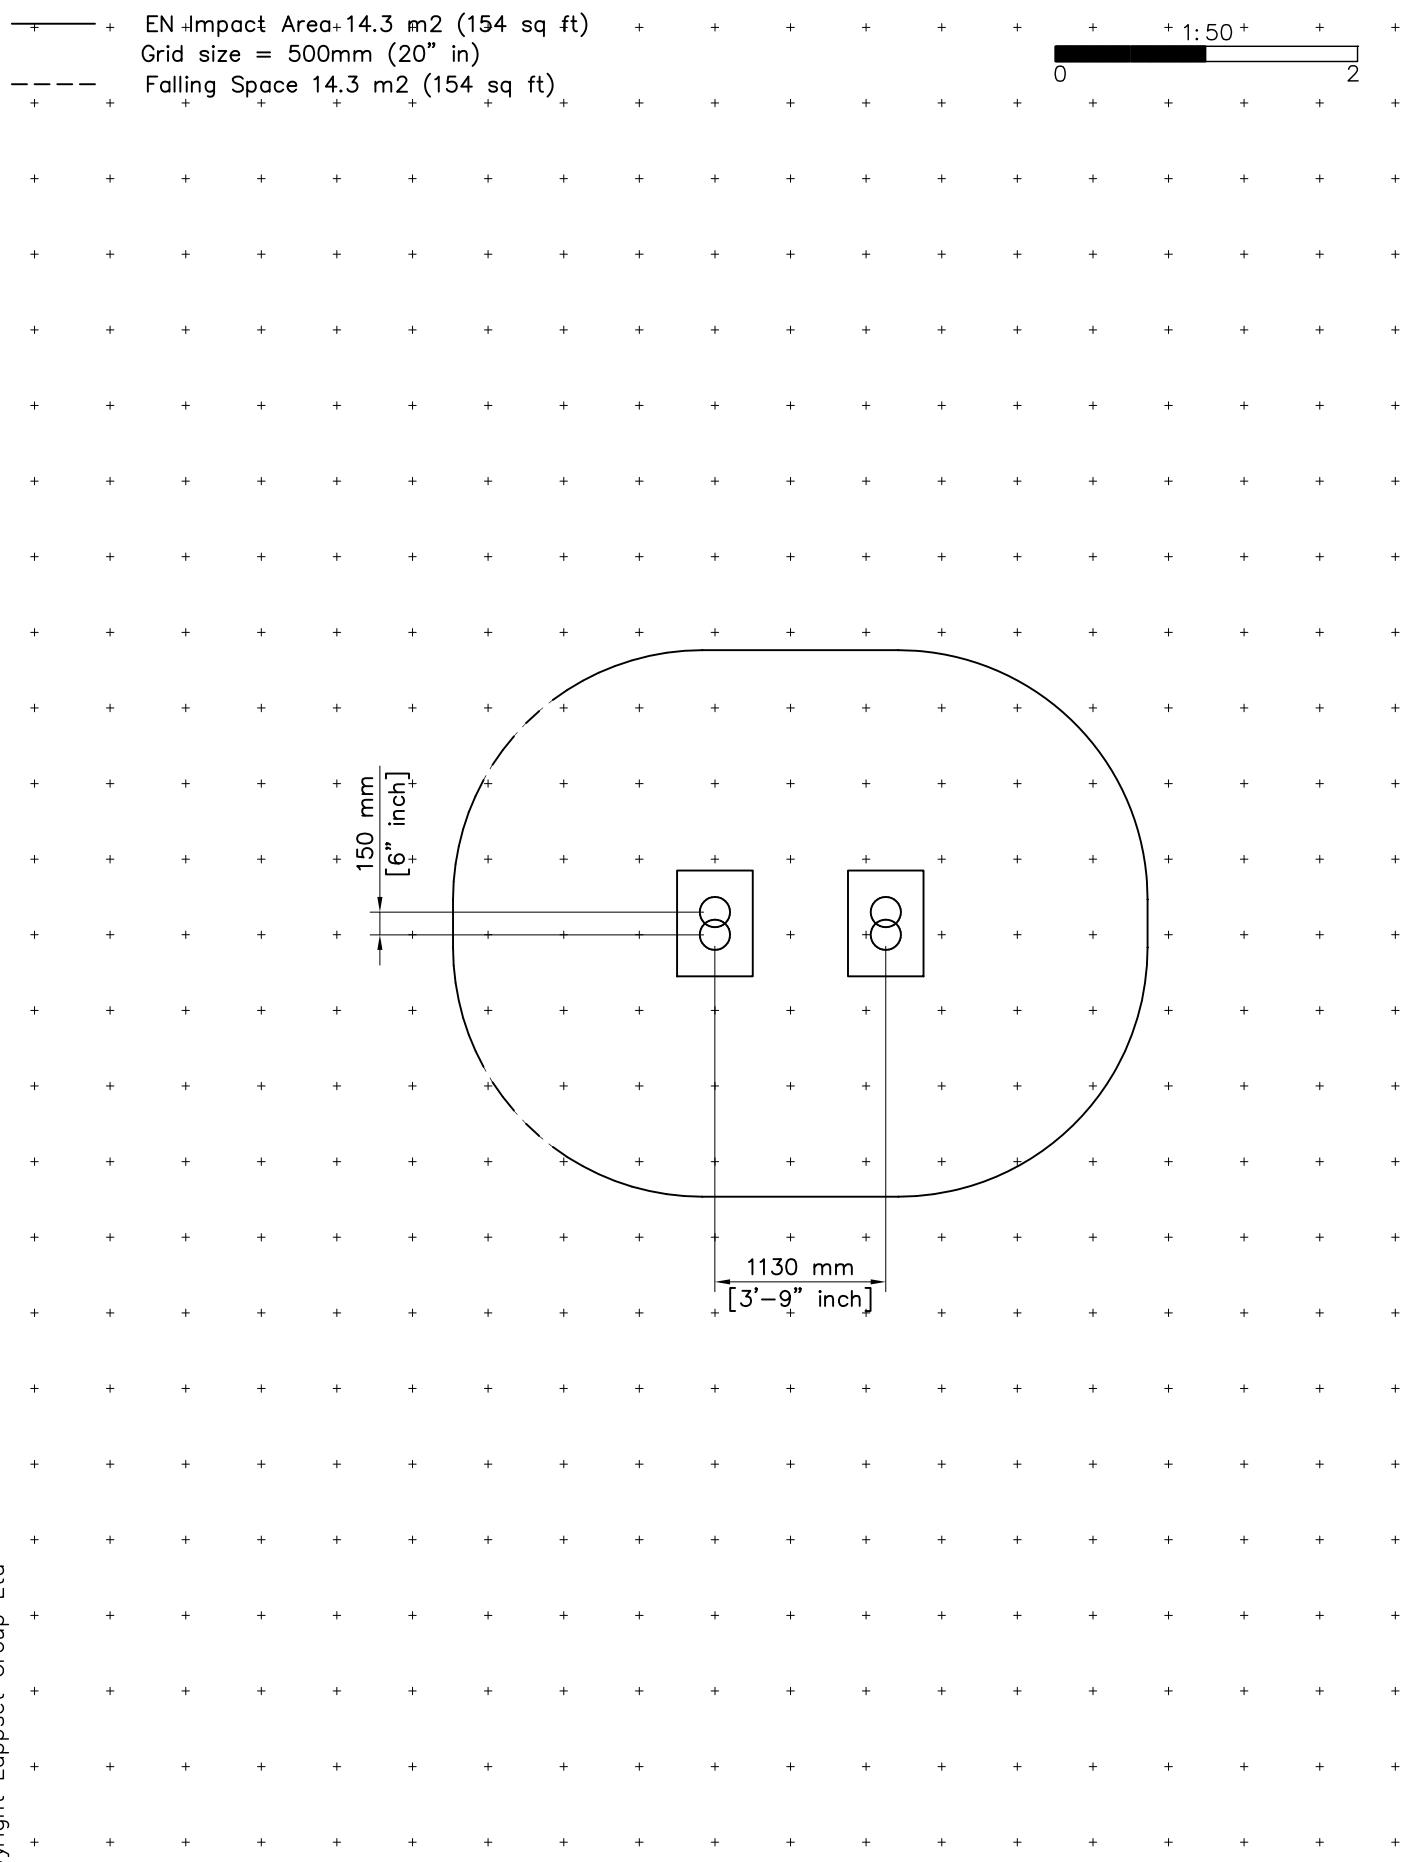

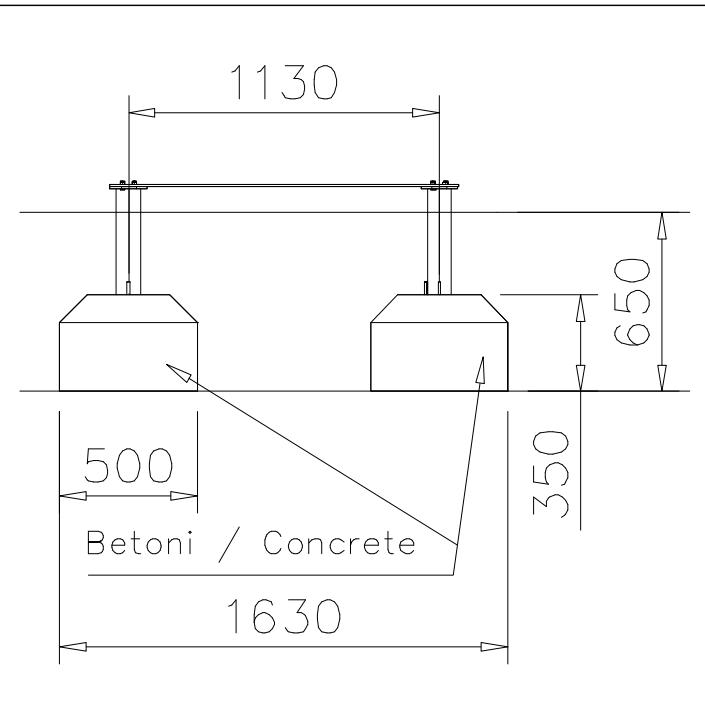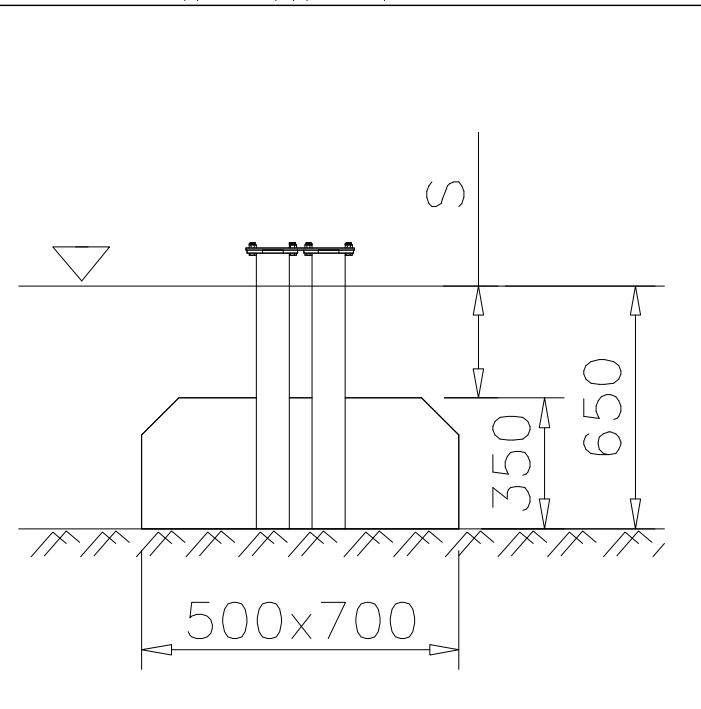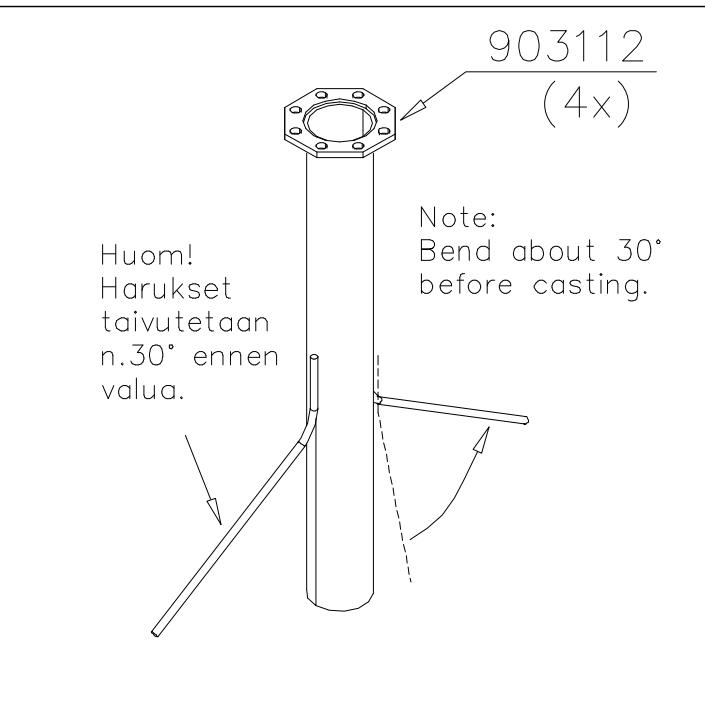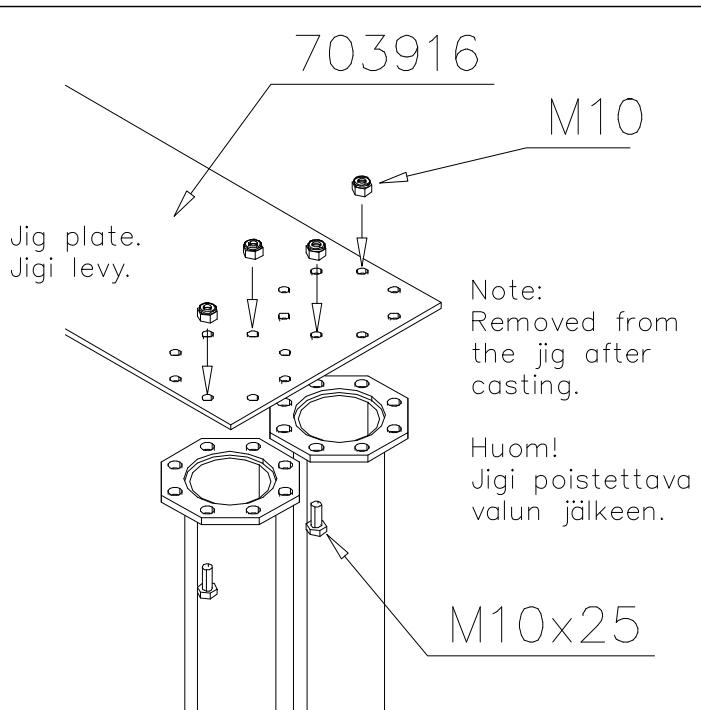


EN Impact Area 14.3 m² (154 sq ft)


1:50



Falling Space 14.3 m² (154 sq ft)

0 2

Max Falling Height 1720 mm (5'-8" in)

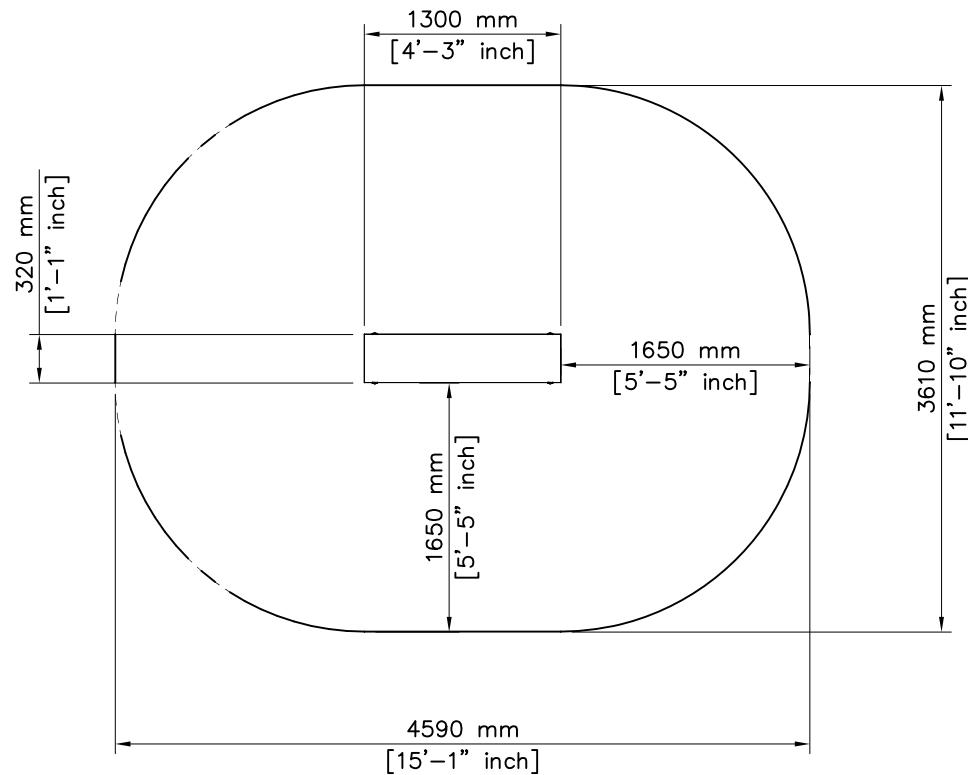

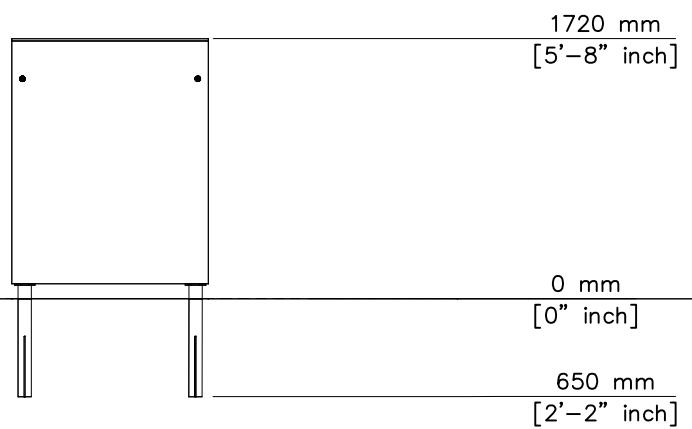


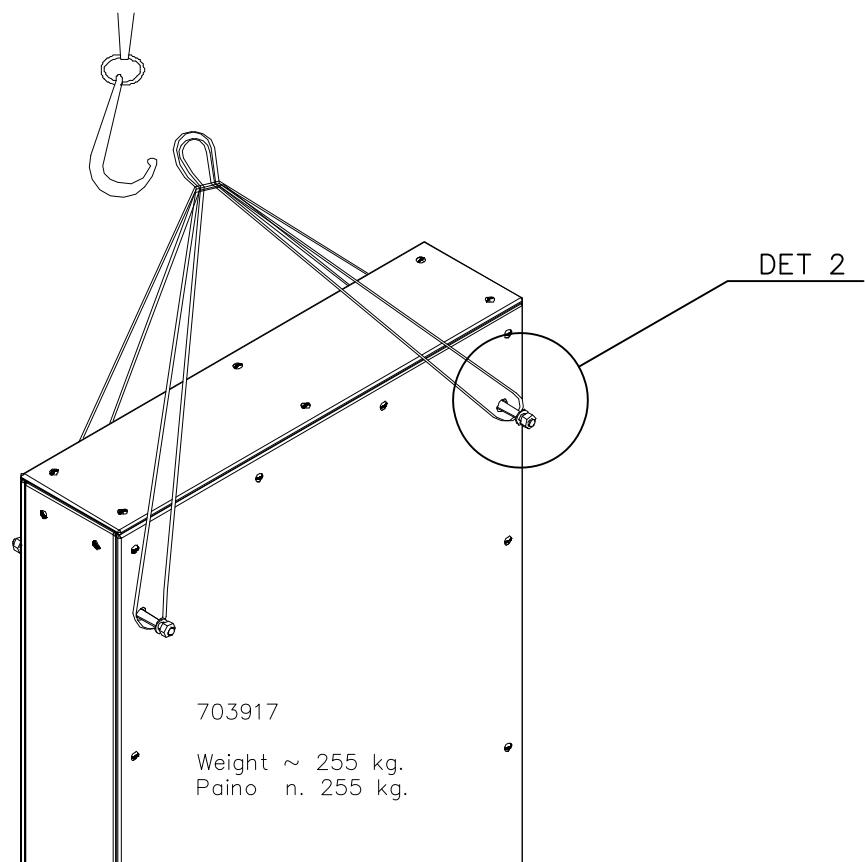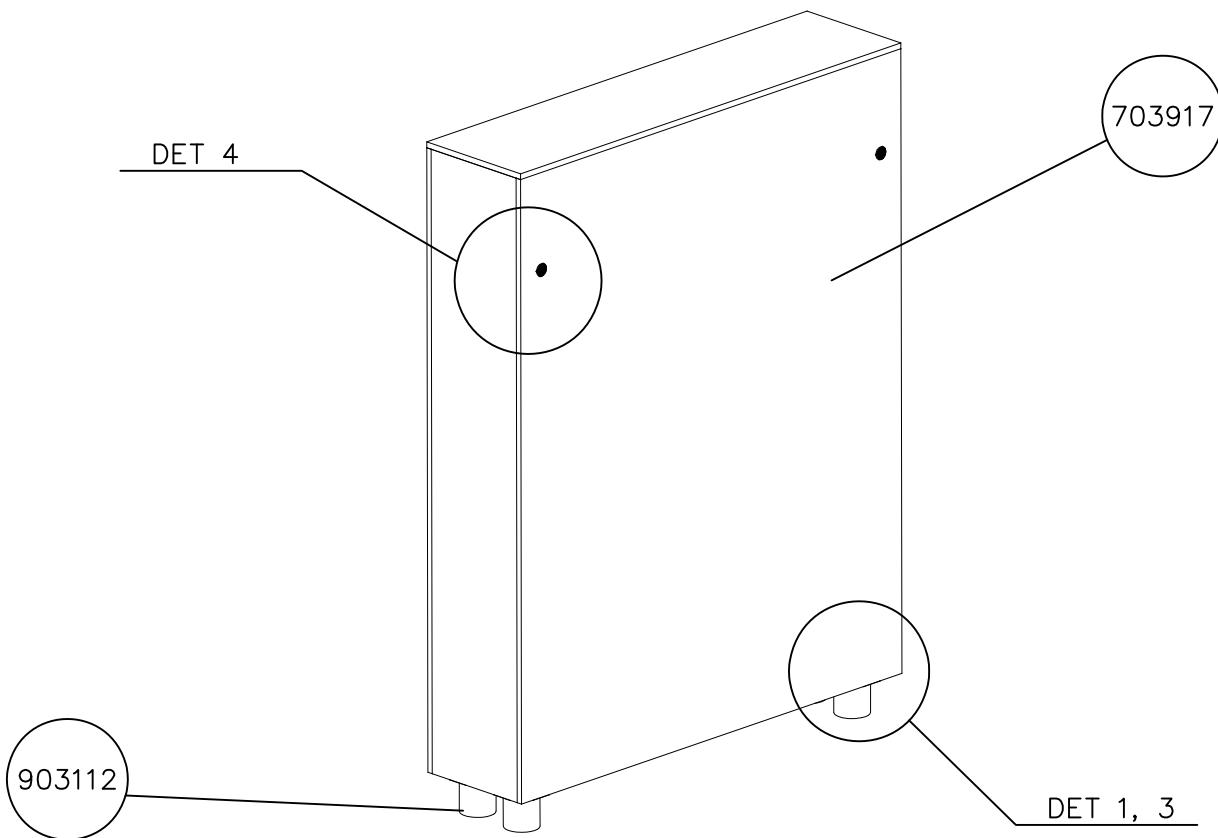

DET 1

Note:
Installation jig plate.


Huom!
Asennus jigi levy.

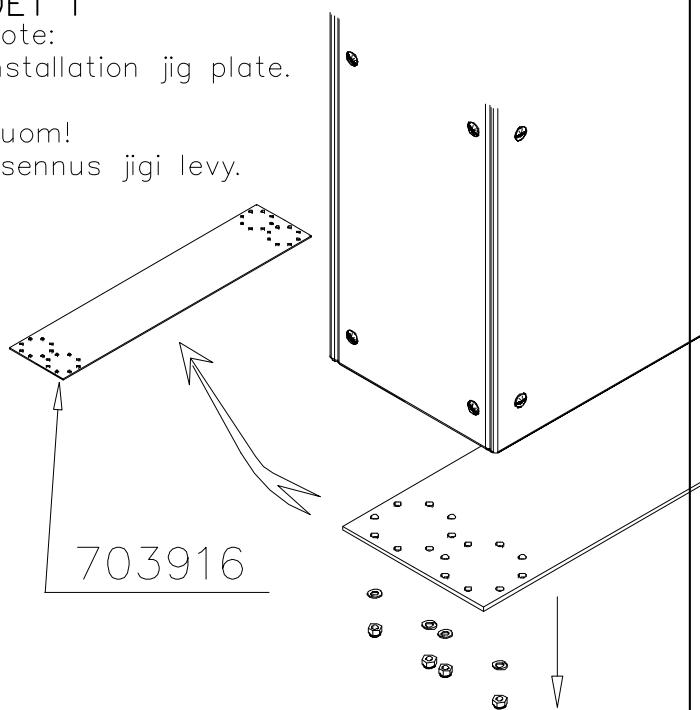


DET 2

Note:
Before lifting.

Huom!
Ennen nostoa.

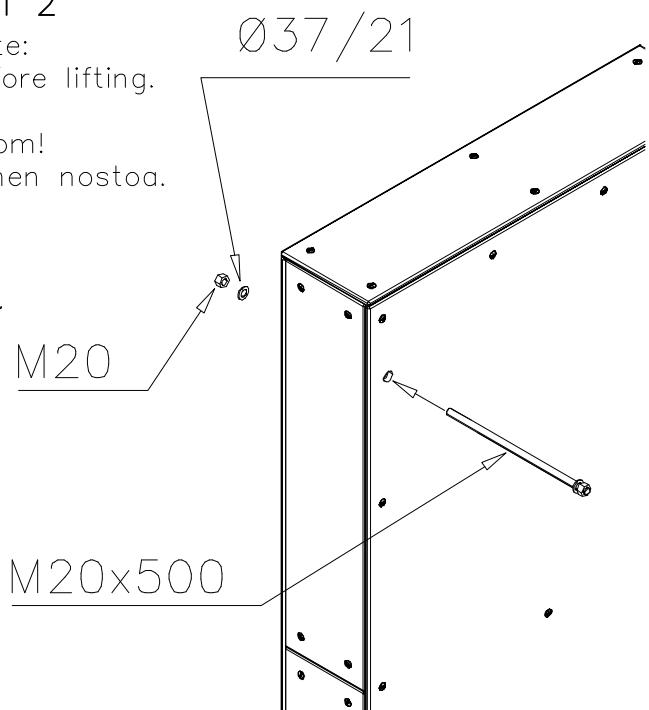

DET 3

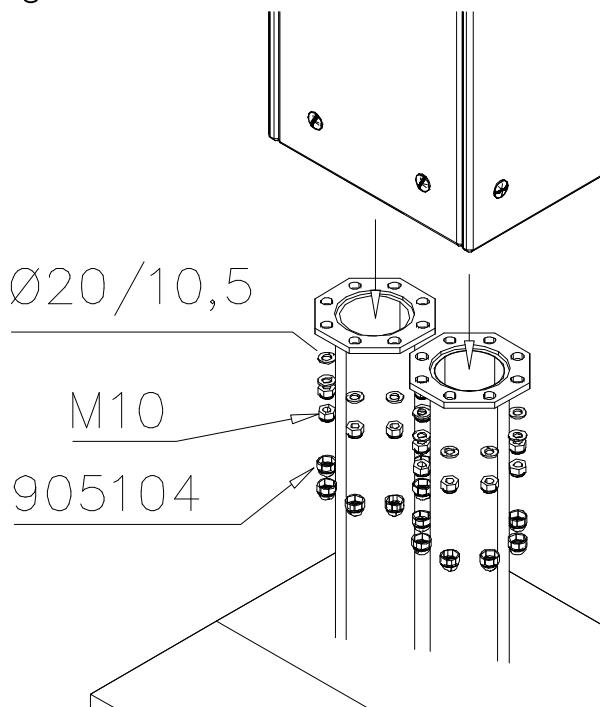

DET 4

